

# ARESTER

## Tartım Sistemleri

### 5 Pin Loadcell Connector

- 1) +Exc (+5V)
- 2) -Sgn (-Sinyal)
- 3) +Sgn (+Sinyal)
- 4) -Exc (Gnd)
- 5) shield

#### Zemic Loadcell

- Kırmızı**  
Beyaz  
**Yeşil**  
Siyah



### 2 Pin Loadcell Connector

- 1) +V
- 2) Gnd



### DC Adaptör

- 1) +12V/1A (iç)
- 2) Gnd (Dış)



### RS232

- 2) RX
- 3) TX
- 5) Gnd

